

WOODKEEPER FILL-O-DENT

Woodkeeper Fill-O-Dent is a high-performance, water-based dent, hole and scratch filler for wood and veneers. It is available in four primary colours of White, Teak, Walnut and Dark Walnut.

APPLICATION PROCEDURE



Sanding – Sand the seasoned wood with sand paper no. 120. Wipe the surface clean.



Application – Apply Woodkeeper Fill-O-Dent on the clean surface to plug holes and dents. Allow the dent filler to dry for about 2 hours.



Sanding & Re-coating – Sand the filled dent with sandpaper no. 180 followed by 220. Apply another coat of Woodkeeper Fill-O-Dent if necessary and repeat sanding with sandpaper no. 180 followed by 220.



Application of Epoxy Block primer & Sealer – Apply Epoxy Block Primer & then Sealer followed by topcoat as per recommendation.

DOS AND DON'TS:

Dos



Choose Fill-O-Dent colour matching to Wood color. Don't use white for Walnut veneers.

Don'ts



White Fill-O-Dent on Walnut Veneers - A wrong choice. Filler shade should match wood colour

TECHNICAL DATA:

Viscosity in poise	175±15
Specific Gravity gm/L	1.85±0.05
Surface Dry	Less than 45 mins
Sanding Time	Less than 1.5 hours
Flash point	Above 4° C (Abel Closed Cup)
Fire Hazard Class	Flammable